





















# ESPRIT CARE GUIDELINE

## GUIDELINE ON HOW TO WASH YOUR CLOTHES


01/03/2017  
sustainability@esprit.com  
Esprit Europe Services GmbH

This document is the result of the work done by Esprit, Esprit-Allee, 40882 Ratingen, Germany. Esprit claims all the copyrights thereto. Any utilisation, duplication, insertion in databases, reproduction and other usage in any form whatsoever is not allowed without the prior written approval of Esprit. The contents may not be used for any purpose other than that approved by us in writing. All data is non-binding and subject to change without notice. Errors, mistakes and changes reserved.

## ESPRIT CARE GUIDELINE

Care Symbol	Explanation
	Do not wash
Detergent	Please see instructions on detergent package for details. Always put detergents into the proper place in the washing machine. Do not put detergent directly onto garments => may cause stains and local color fading
	Hand wash, max. temperature 40°C
	Machine wash normal process 30° Loading: Full
	Machine wash, mild process 30° Loading: Fill machine only to half capacity
	Machine wash, very mild process 30° Loading: Only 1 - 2 kg (see manual of your machine). Must be used for sensitive garments, especially if they contain wool. Less motion + higher water level = less friction
	Machine wash, normal process 40° Loading: Full
	Machine wash, mild process 40° Loading: Fill machine to half capacity
	Machine wash, very mild process 30° Loading: Only 1 - 2 kg (see manual of your machine). Must be used for sensitive garments.. Less motion + higher water level = less friction
	Machine wash, normal process 60° Loading: Full
Wash in laundry bag	For garments that may damage other garments, e.g. hooks or decorations, or that may be damaged by other garments.
Wash separately	Garment may bleed dye, wash by itself
Wash with similar colors	Garment may bleed, wash with other garments of similar color, not with white or light colors
Wash and iron inside out	Gentle treatment of garment. Iron from the inside to avoid glossy marks.
	Do not bleach: Choose detergent without bleaching agents- that means no heavy-duty or all-purpose detergents as they contain whitening or bleaching agents which will cause color fading
	Do not tumble dry. Line dry. For sensitive or heavy garments e.g. sweaters: dry flat.
	Tumble dry, low temperature
Down jackets	Must be tumbled, otherwise down will form lumps
	Do not iron
	Iron at maximum temperature 110°C
	Iron at maximum temperature 150°C, if possible with steam
	Iron at maximum temperature 200°C, if possible with steam
Viscose	May shrink, needs ironing to retain original dimensions
Dry Cleaning	For environmental reasons and to avoid costs, Esprit only recommends dry cleaning if <ul style="list-style-type: none"> <li>a. Fabric or trims are not washable</li> <li>b. Garment may require complex ironing skills</li> <li>c. Garment has color blocking. Colors may bleed if washed.</li> </ul>
	Do not dry clean
	Professional dry cleaning, normal process
	Professional dry cleaning, mild process
	For leather: This symbol + "Dry clean only, using dry cleaner specialized in Leather"

## Introduction/ General Information on Care Labels:

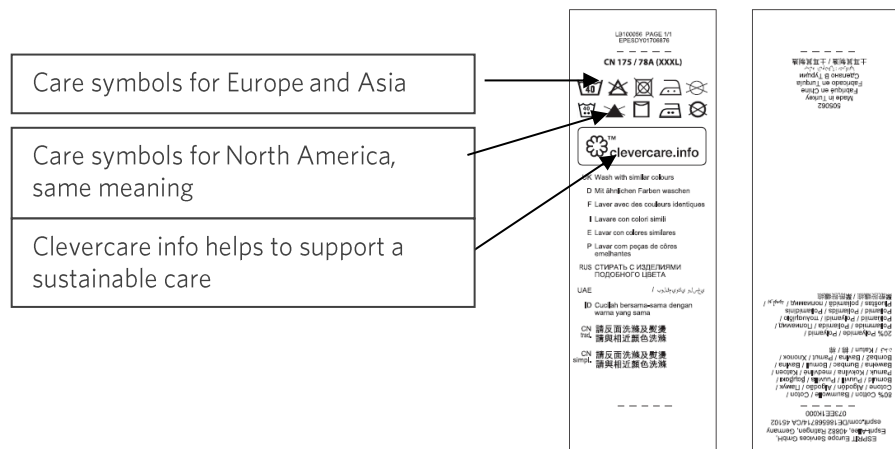

- General information about care. Aim: Durability, sustainability
- Sensitive fibres/ material
  - Wool, mohair, cashmere, alpaca, silk =
  - Sensitive decoration e.g. beads, rhinestones = use laundry bag or hand wash to avoid snagging
  - Sensitive fabrics e.g. mesh: Wash in laundry bag
- To avoid damaging garments: Close zippers before wash

## Bleeding Label



- For denims or garment dyed articles. For a special look, some articles may be produced in greige fabrics and dyed afterwards.
- Excessive dye may migrate to other articles => wash separately or with similar colours
- Be careful in contact with light coloured fabrics, furniture and other articles

**Non-Textile Parts Label**

What does this mean? Garment contains non-textile parts of animal origin (e.g. mother-of-pearl buttons, genuine leather patches, horn buttons, down) with the exception of fibres. Animal fibres like wool, silk, cashmere, mohair, alpaca are always listed in the fibre composition.

